



TOASTER

PT 3740 / PT 3730

Instruction Manual



Dear Customer,

Congratulations!

You are now the proud owner of USHA Toaster

Innovatively designed, using only the highest quality material and components, your USHA Toaster is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes



CONTENTS

Know your Toaster

Description of Parts 4

Key Features 5

Safety Instructions

Important Safeguards 6

Operate Usha Toaster

Toasting 7

Toasting Tips..... 7

Care and Cleaning 9

Miscellaneous

Technical Specifications 9

Warranty Card 10

KNOW YOUR TOASTER

DESCRIPTION OF PARTS

1. Self-centering Bread Slots
2. High-lift and Toasting Lever
3. Defrost Button
4. Reheat Button
5. Cancel
6. Browning Control Dial
7. Removable Crumb Tray
8. Dust Cover (only for PT 3730)



KEY FEATURES

VARIABLE BROWNING CONTROL

The browning controller dial in the labeled diagram allows the user to get the desired crispiness of toast. Some users may like to have crispy brown toasts while some may like it softer and less brown. Usha Toaster allows user to get desired crispiness up to the maximum 7 levels.

EASY TO CLEAN SLIDE OUT CRUMB TRAY

Usha Toaster comes with an easy to remove crumb tray to clean bread crumb collected due to toasting.

CANCEL BUTTON

The Cancel button immediately interrupts any toasting cycle and pops the toast up.

REHEAT BUTTON

Simply press the toasting lever down, then press the reheat button to start the reheat cycle.

DEFROST BUTTON

The Defrost setting ensures bread can be toasted straight from the freezer. The colour of your toast will brown according to the browning setting you have chosen.

HIGH-LIFT LEVER

Raises the toast above the starting position so you can remove the toast from the toaster without burning your fingers. Ideal for crumpets and muffins.

IMPORTANT SAFEGUARDS

1. Read All Instructions carefully.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. This appliance is not advised to be used by anyone (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless properly guided about the use of the appliance in a safe manner by the person concerned for their safety. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
4. Caution: During operation the appliance heats up/becomes hot and it is therefore recommended to avoid touching the metallic parts of the appliance with bare hands. Use handles or knobs only.
5. Before storing the appliance let it cool down. Then pull the plug from the socket.
6. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
7. Unplug unit from outlet when not in use and before cleaning.
8. Do not operate the appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
9. Do not operate the appliance near or below curtains and other combustible materials, they must be watched.
10. Do not let the cord hang over edge of table or counter, or touch hot surface.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Don't attempt to dislodge food when toaster is in operation.
14. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
15. When the bread is stuck unplug the toaster, use tongs to remove the bread. Be careful not to damage the heating wires and rendering the toaster inoperable.
16. The toaster is not suitable for preparation of sandwiches with fillings. ONLY toast bread slices therefore.
17. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
18. Be sure to take the bread out carefully after toasting so as to avoid injuries.
19. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
20. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
21. **Warning:** if you are toasting small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.
22. Don't use the appliance outdoors.
23. Use the appliance on a level and stable surface.
24. This appliance is intended to be used in household and similar applications such as:
 - a. staff kitchen areas in shops, offices and other working environments;
 - b. farm houses
 - c. by clients in hotels, motels and other residential type environments;
 - d. bed and breakfast type environments.
25. Save these instructions.

OPERATING INSTRUCTIONS

Plug the toaster into a 230 volt AC power outlet and switch the power on.

TOASTING BREAD

1. Position the bread into the bread slot.
2. Select the desired browning setting using the Browning Control.
 - a. **Note:** If toasting 1 slice it is recommended that you use a lower browning setting to achieve your required result and to prevent burning.
 - b. Important: Do not toast stale bread, rice crackers or similar on a high setting as there is a chance that they may catch fire.
3. Push the Toasting Lever down to commence the toasting cycle.
4. When the desired browning is achieved, the toaster will automatically stop toasting and pop the toast up.
5. If you need to remove the toast before the cycle is complete, press the Cancel button and the toast will pop up.
6. To remove small pieces of toast, crumpets or bagels, use the High-lift Lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

TOASTING TIPS

- Toasting is a combination of drying and cooking the bread, and because moisture levels differ from one bread to another, toasting times can vary.
- If your bread jams in the toaster, switch the power off, remove the plug from the power outlet and ease the bread out of the toaster.

BREAD TYPES

- For slightly dry bread, use a lower setting than normal.
- For fresh bread or whole wheat bread, use a higher setting than normal.
- When toasting raisin or other fruit breads, remove any loose raisins or fruit from the surface of the bread before putting it into your toaster. This will help prevent fruit pieces from falling into your toaster or sticking to the guard wires in the toasting slot.
- Bread which has a very uneven surface will require a higher setting.

CRUMPETS AND THICKER BREAD

- Thicker cut pieces of bread (including crumpets) will take longer to toast— sometimes significantly longer. This is because more moisture must be evaporated from the bread before toasting can occur. Very thick pieces of bread may require two toasting cycles.

MUFFINS AND BAGELS

- Ensure muffins or bagels are cut into even halves and fit freely into the bread slot. Do not force them into the toaster

SINGLE SLICE TOASTING

If toasting 1 slice it is recommended that you use a lower toaster setting to achieve your required browning and to prevent burning.



WARNING:

Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other metal object, as contact with the live element may cause electrocution.

CARE AND CLEANING

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

TO CLEAN THE EXTERIOR

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.



CAUTION

To prevent damage to the appliance, do not use alkaline, chemical or abrasive cleaners as these may scratch the surface.

REMOVABLE CRUMB TRAY

To remove the crumbs, simply pull tray out, empty it and place it back in the toaster.

IMPORTANT

Clean the crumb tray regularly. Do not allow crumbs to accumulate, as they may cause a potential fire hazard.

TO CLEAN THE TOASTER INTERIOR

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs bread cannot be toasted in the bread slot.

MISCELLANEOUS

PRODUCT SPECIFICATIONS AND TECHNICAL DETAILS		
Model No.	PT 3730	PT 3740
Wattage	750 W	1400 W
Capacity	2 Slice	4 Slice
Input Power	230 V / 50 Hz / Power Cord: 3 pin, 10A	
Accessories	Removable Crumb Tray & Dust Cover	Removable Crumb Tray

Note: In view of USHA policy of continual development, specifications may change without notice.

WARRANTY CARD

This appliance is warranted for 2 year on product against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at:
Toll Free No. 1800 1033 111.

The warranty is valid only when:

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied.

S.No: _____

DATE: _____

CASH MEMO: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



TOASTER

PT 3740 / PT 3730

To explore our range of
product and recipe log
on to www.usha.com

