




LUSTRA SERIES LUSTRA COMPACT SERIES

Instruction Manual

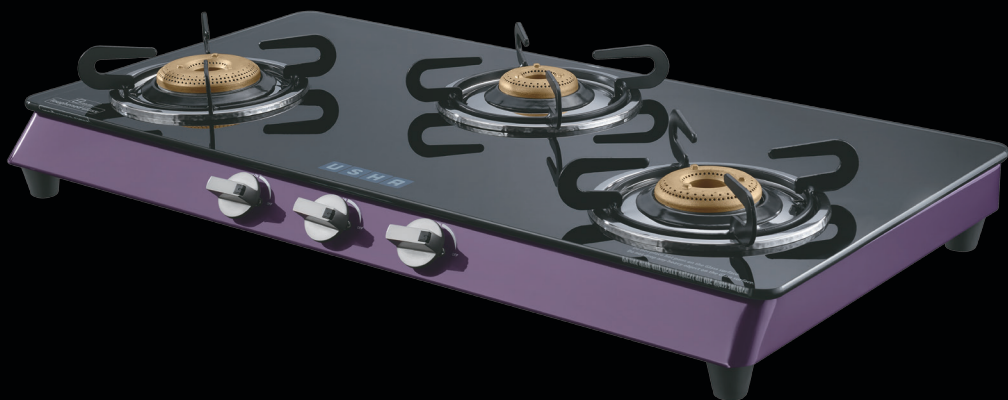

Dear Customer,

Congratulations!

You are now the proud owner of USHA Lustra / Lustra compact Cooktop – a state of art, technologically advanced Cooktop. This modern Cooktop makes cooking healthy and safe. This is another unique quality product from Usha International Limited, a name synonymous with trust and reliability.

All USHA products are designed to give you trouble free performance. We suggest you to read this user manual carefully to ensure many years of trouble free and easy cooking.

Enjoy Cooking

CONTENTS

Know your Cooktop

Description of Parts 3

Operating Instructions

Installation..... 4-5

Safety Instructions

Important Safeguards..... 6

Safety Check..... 6

Miscellaneous

Technical Specifications 6


Warranty..... 7-8

Warranty Card..... 9

Notes..... 10

KNOW YOUR COOKTOP

DESCRIPTION OF PARTS

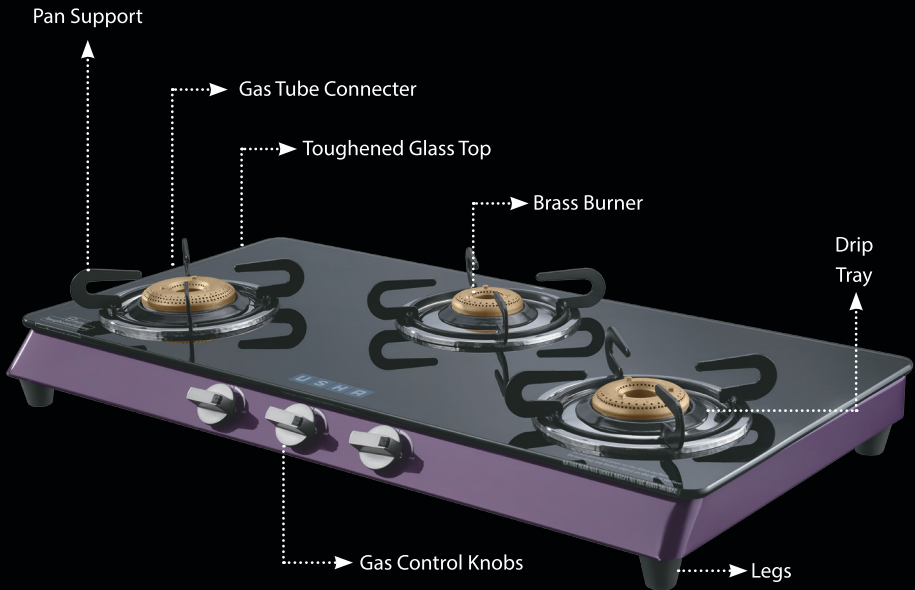

NOTE:

The above illustration is only for indication and may not be same in the product. Design, shape and components will may vary for two burner, three burner & four burner models. In pursuence with our policy of continous product improvement, specification are subject to change without notice.

OPERATING INSTRUCTIONS

INSTALLATION

- Unpack the cook top and remove all the packing material.
- Check and ensure that all the burner and pan support are in the position and seated properly.
- The gas control knob should be in OFF position at the time of installation.
- The cooktop should be placed at a convenient working height against a wall. It should be kept away from shelves and curtains.
- Windows should be closed and use of fan should be avoided during its operations.

Note:

- Do not use a vinyl plastic tube or tube with metallic cover, as this can be dangerous. It is suggested that only steel reinforced specially designed rubber hose for LPG to be used. Rubber hose should be supplied by approved by Gas Company providing gas connection. The tube should not be twisted, looped or kinked, or subjected to external pressure of any kind.
- Push the rubber hose onto the nozzle as far as it will go.
- The tube is not be extended from one room to another and must not be passed through doors windows, walls, partition, ceilings or floors.
- After the hose is fixed, the Cook top is ready to use.
- In case you find difficulty in assembling the Cook top, please call nearest Usha Service center

Other Instruction for Use:

- The Gas Cylinder should always be in vertical position, while in use.
- To turn the Cook Top "ON": (for Non-Auto ignition models)
 - o First open the gas regulator. Light a match stick over the operating burner, while simultaneously turning the operating knob towards "ON" position.
 - o The burners may not ignite the first time you use them. This may be due to the result of air in the gas tube. Turn the gas control knob back to the "OFF" position and try again until burner ignites.
- To Turn the Cook Top "ON" (for auto ignition models)
 - o First open the gas regulator. Turn the ignition knob towards the ON position. A click sound will come and burner will ignite WITHOUT use of any match stick etc.
 - o The burner's may not ignite at the first click, if used after along gap of time. This is because the gas in the pilot line take a little time to flow and ignite the flame.
 - o To ensure lighting press the knob, hold for a second and then turn the knob to "ON" position.
 - o Always make sure that gas stove is lit when the knob is turned to "ON/SIM" position. Otherwise the gas will be leaking and can be Dangerous.
 - o If the gas stove does not get lit, bring the knob to "OFF" position and repeat until the gas stove lights.
- **For PU paint models, DO NOT use rough/hard scrubbing material or cleaning agent. Soft moist sponge are preferred material to clean the painted surface to maintain the long lasting shine.**

- Use the cook top for cooking purpose only. Do not dry towels, clothes etc. over it.
- When using high flame, ensure that you use large sized vessels to covers the entire flame to avoid wastage of gas.
- When using smaller vessels, reduce the flame intensity to the required optimum.
- While cooking always avoid the content being cooked to overflow and fall on the burner. This may extinguish the flame and also block the burner holes.
- Wipe clean the cook top, pan supports and drip pans with warm soapy water and use a soft cloth to avoid scratches.
- Clean the burner regularly so that they don't get clogged. Do not use abrasive materials for cleaning. If you clean the burners with water, make sure that you dry them properly before using.
- Please ensure that the auto ignition unit is free from food particles / liquids as it may affect ignition.
- Always check the flexible tube periodically for any wear and tear to avoid gas leaks and prevent danger.
- **If you find gas leakage smell, close the gas regulator of the cylinder / pipeline, open up all windows and call your Gas SUPPLY agents. Do not switch "ON" any electric switch or light matches / lighter etc.**
- Always remember NOT to check the gas leak with a flame. Keep the tube away from heat.
- Keep away any flammable material / liquid from the Cook Top.
- When using a lighter to ignite the burner keep a distance of almost 0.5 cm between them to prevent gas from burning in the gas pipe. In case this happens, immediately switch off the burner and reignite.
- Toughened glass is used for the cooking table in glass top models. However, necessary precaution on handling of glass, is very important. Make sure that when the glass is hot, there should not be any dripping of cold water or liquid on glass as it may damage the glass.
- The breakage of glass due to any reason is not covered under warranty.
- Do not try to dismantle / repair the gas valve or burner nozzles yourselves as the same may not be replaced properly which may be hazardous for your health.
- For auto ignition battery operated, please do periodically change the battery for better result.
- Do not clean with alcohol or kerosene because it may damage the cook top.
- Do not leave the gas burner unattended while in on position.
- After the cooking is over, turn both the gas control knobs and gas regulator off, e.g., when going to bed or leaving the house.
- Keep the Gas Stove out of reach of children.

REPLACEMENT PARTS

When replacement parts are required, be sure that the service technician has used replacement parts specified by Usha International Ltd. That have same characteristics as the original parts. Unauthorized substitution may result in hazards.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference. Carefully observe all warning, precaution and instruction for use described hereunder and adhere to them

SAFETY CHECK

Upon completion of any service or repairs to the appliance, ask the service technician to perform routine safety check to determine that the appliance is in safe operating condition. Usha gas stoves for use with Commercial Liquefied Petroleum Gases

MISCELLANEOUS

TECHNICAL SPECIFICATION

Model	Lustra				Lustra Compact			
No of burner	2 Burner		3 Burner		2 Burner		3 Burner	
Pan support type	Round	Square	Round	Square	Round	Square	Round	Square
Frame finish (colour)	Magenta & Black	Red & Black	Magenta & Black	Red & Black	Magenta & Black	Red & Black	Magenta & Black	Red & Black
Gas consumption (g/h)	332	332	553	553	332	332	553	553
Small burner (Ø68)	143	143	143	143	143	143	143	143
Big burner (Ø78)	189	189	189	189	189	189	189	189
Jumbo burner (Ø92)	NA	NA	221	221	NA	NA	221	221
Ignition	Manual							
Burner	Forged brass burner							

* In view of USHA Policy of continuous development, specification may change without any prior notice.

* These cooktop shall be used with Liquefied petroleum gas, at 2.942KN/m²(30gf/cm²) pressure only.

* In view of USHA Policy of continuous development, specification may change without any prior notice

* To connect With LPG Gas cylinders, These cooktop connection to be used with ISI marked LPG Hose-Gas pipe reinforced steel wire, with inner dia - 8.0mm.

WARRANTY

WARRANTY TERMS & CONDITIONS

The Company provides warranty for a period of two (2) years on components of product except for auto ignition valve and its components on which warranty is for period of one (1) year from the date of purchase, five (5) years on toughened glass. The warranty is given only against manufacturing defect, faulty material and workmanship. For Lustra, Burners & Lustra Compact range of cooktops: warranty is for five (5) years from the date of purchase only against manufacturing defect, faulty material and workmanship. The aforesaid warranty is valid only when the sale receipt or duly filled and stamped warranty card by the authorized representative of USHA Company showroom, or USHA distributor, or USHA retailer, is presented at the time of the complaint. In case of glass cooktop the original sale receipt from the date of purchase or duly filled and stamped warranty card by the authorized representative of USHA Company showroom, or USHA distributor, is presented at the time of the complaint. The Warranty is valid within the territory of India. Warranty starts from Date of Purchase and not from Date of usage. The sale receipt is the proof of purchase of Product. Incomplete warranty card will be treated as invalid. In the event of any complaint, please contact USHA Care at Toll Free No. 18001033111.

The Product shall mean cooktops bearing the brand name USHA

This warranty does not apply to:

- a) Damage caused due to normal wear and tear of paint, parts, chipping, peeling, plating and denting of the Product.
- b) The discoloration of glass in glass models.
- c) Breakage of glass due to mishandling/external impact (glass hit by external articles like heavy objects, wall etc.) will not be covered under warranty.
- d) In case the product is not used as per the guidelines/instruction manual. Do not use tandoor oven/batti cooker/any other similar products on the glass top as this may block the flame and create abnormal temperature on the glass surface. The damage to the glass on account of this will not be covered under warranty.
- e) The parts of Product that may require replacement in connection with normal maintenance such as Gas Jet, Gas Cook Assembly, Burn Plates, Knobs, Dents, Rubber Legs, Knobs, Paint Chipping or Fading of the Products etc.
- f) If the Product has not been installed, used and maintained as per the instruction manual.
- g) If any repair and modification work(s) has been carried out by a person other than the Company authorized person and service center.
- h) Damages resulting from accidents, mishandling, improper use or negligence on part of the customer and also damage during transit after the Product is purchased by the customer.
- i) Damages resulting from change in factory setting of the Product.
- j) Damage caused by liquids, incidental fire and /or other external factors.
- k) If the Product is not operated in accordance with instruction given in instruction manual due to which Product is damaged. If the serial number of the Product is deleted, defaced and damaged or removed for any reason whatsoever.

- l) If Cylinder Valve, Pressure Regulator or tube is not confirming to the relevant specifications
- m) Failure to comply with safety precaution and/or maintenance guidelines given by supplier of LPG or manufacturer of pressure cooker or any other utensils or appliances used on the cook top.
- n) In case the Customer modifies the Product for use with PNG (Piped Natural Gas), warranty will be applicable for those components of Product which are not damaged due to leakage of gas. Under no circumstances the Company shall be liable for any special, indirect, incidental, exemplary or consequential loss or damages on any account whatsoever, due to fitting of Product with PNG or usage thereof.
- o) Discoloration, Denting, Deformation & chipping or peeling of brass burners due to usage.
- p) Products that are used for commercial purposes.
- q) 5 year warranty is only for the toughened glass and burners. The product warranty shall remain in force for 2 years.

This warranty is in lieu of all others expressed or implied and does not cover:

- a) Modification of the product not authorized by USHA;
- b) Improper and unprofessional use;
- c) Change in the factory setting of the product;
- d) Accident and damage;
- e) Usages other than as prescribed in the instruction manual for use;
- f) Fire, flood and other act of God;

The Company shall not be responsible for any delay in servicing due to non-availability of the components or due to any reason beyond the control of the Company. The failure of the Product to perform any purpose other than the intended purpose will not be considered as default under the warranty. This warranty is provided to the original purchaser of the Product and is not transferable to any third party. This warranty is valid only when the failure of the Product does not arise due to use for any unintended purpose. A defective Product/part will be repaired within the warranty period provided it is properly packed. The Company price will be charged for worn out or broken parts not covered under warranty. The claims for missing parts should be notified within 30 days from the date of purchase of the Product or within such time frame as Company may deem fit, exceeding which the claim shall stand denied. The price will be charged for the broken part as per the Company price.

Limitation of liability: Under no circumstances the Company shall be liable for any special, indirect, incidental, exemplary or consequential loss or damages, inter alia including, loss of profit, loss of use, loss of revenues even if informed of possibility of these damages. The Company aggregate liability in respect of all claims under the warranty shall not exceed the original purchase price of the Product or at Company's option, replacement of the Product with like or similar product. The Company excludes all other warranties, conditions, terms, representations and undertakings whether express or implied.

Jurisdiction: This warranty terms shall be governed by laws of India and the courts at Delhi shall have sole and exclusive jurisdiction in relation to any matters and dispute arising under this warranty.

WARRANTY CARD

Customer's Name : _____

Address : _____

Phone Number : _____

Gas Stove Model : _____

Serial No: _____

Invoice No: _____

Date of Purchase : _____

Dealer's Name : _____

Dealers Address : _____

Hologram

Dealer Stamp

NOTES

[illegible]

TO EXPLORE OUR RANGE OF
PRODUCT AND RECIPE LOG
ON TO WWW.USHA.COM
WWW.USHACOOK.COM

USHA
COOK

USHA care[™]

Toll free
1800-1033-111

usha_care@usha.com

USHA INTERNATIONAL LTD.

PLOT No. 15, INSTITUTIONAL AREA, SECTOR 32, GURUGRAM - 122 001, HARYANA TEL : +91-124-4583100,

FAX : +91-124-4583200, E-MAIL : CORPORATE@USHA.COM

REGD. OFFICE : SURYA KIRAN BUILDING, 19 K. G. MARG, DELHI-110 001 CIN-U74210DL1935PLC007123

TEL : +91 11 23318114 FAX : +91 11 23318118

USHA[®]

© Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



© Registered Trademark of USHA INTERNATIONAL LTD.

LUSTRA[®]

© Registered Trademark and Copyright of USHA INTERNATIONAL LTD.