

To explore
our range of products
and recipes log on to
www.ushacook.com

USHA
COOK

USHA care | Toll Free: 1800 1033 111

usha_care@usha.com

USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurugram - 122 001 (Haryana)

Tel : +91-124-4583100, Fax : +91-124-4583200, E-mail: usha_care@usha.com , Website: www.usha.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi 110 001, (India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001 : 2015 Certified Company

USHA® © Registered Trademark and Copyright of USHA INTERNATIONAL LTD.  © Registered Trademark of USHA INTERNATIONAL LTD.

USHA® *iToast*™

4 SLICE POP-UP TOASTER



Instruction Manual



Dear Customer,

Congratulations!

You are now a Proud Owner of an USHA iToast 4 Slice Pop-up Toaster.

Innovatively designed, using only the highest quality material and components for years of trouble free performance.

Please read these instructions carefully before using.

Best Wishes

CONTENTS

Safety instructions	2
Know your product	3
Operating Instructions	4
Cleaning and maintenance	5
Product technical specifications detail	6
Troubleshooting	6
Warranty card	7



HIGH LIFT FOR
EASY REMOVAL



REMOVABLE
CRUMB TRAY



TOASTING
IN PAIR OF 2



AUTOMATIC BREAD
CENTERING



6 BROWNING
SETTINGS



FREE
HOME
SERVICE*

SAFETY INSTRUCTIONS

1. Please read this instruction manual carefully before use and keep it in a safe place for future reference.
2. Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
3. Before using check that the voltage of the wall outlet corresponds to the one shown on the appliance nameplate. For home use only.
4. Do not use the appliance for any other purposes than described in this instruction manual.
5. Do not use outdoors.
6. Always unplug the appliance from the power supply before cleaning and when not in use.
7. To prevent the risk of electric shock and fire, do not immerse the appliance in water or any other liquids. If it happened DO NOT TOUCH the appliance, unplug it immediately, and get it checked in the service center.
8. Do not take this product into a bathroom or use it near water.
9. Do not place appliances or parts near an open flame, cooking, or other appliances.
10. Close supervision is necessary when it is used near children.
11. Do not leave the appliance switched ON when not in use.
12. Do not use other attachments than those supplied by the manufacturer or the authorized service center.
13. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Take the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
14. Keep the cord away from sharp edges and hot surfaces and Do not pull, twist, or wrap the power cord around the appliance.
15. Do not move the appliance until it cools down completely.
16. Never use sharp objects to take out sliced bread! When taking out sliced bread, be careful not to damage the heating wires.
17. Do not touch any metal part of the outer surface of the appliance as it may reach a very high temperature.
18. Do not insert bread slices that are too thick or wrapped in aluminum foil to avoid electric shock or fire.




ATTENTION:

TOO LONG TOASTING MAY CAUSE FIRE.

19. Do not cover the toaster during operation.
20. Toasters must not be used near or below curtains and other combustible materials. They must be watched.
21. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
22. The surfaces are liable to get hot during use. Take care while handling
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance

KNOW YOUR PRODUCT

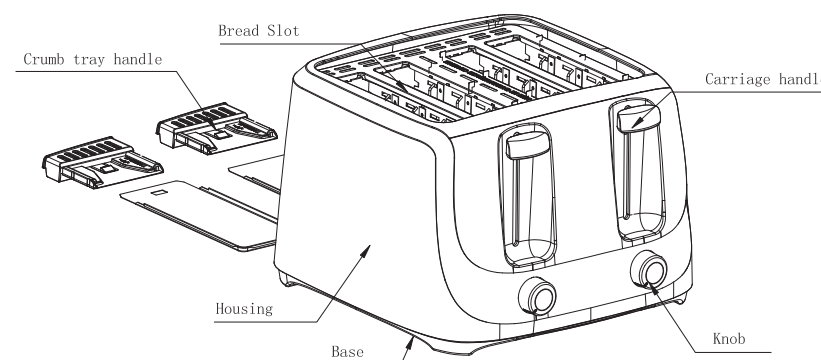

OPERATING INSTRUCTIONS

BEFORE FIRST USE

- Before using the toaster for the first time clean your toaster (see Chapter “CLEANING AND MAINTENANCE”). Operate the toaster at least two times without bread but on the highest setting. Ventilate the room during this period.
- As all new electric heating elements, your toaster creates a new smell when it is first switched on. This is quite normal and not a cause for concern.

HOW TO OPERATE

1. Put bread slice into the bread slot, which can be inserted four slices at most every time.

Note: Make sure the crumb tray is properly positioned in place before using.

2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is 6-position level, the lowest is white and the highest is dark brown. The bread slice can be toasted to golden color at the position of “3”.

Note:

- a. Toasting color for one side is darker than that for double bread at the same level.
 - b. If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.
 - c. The color setting should be adjusted before toasting. It should not be adjusted during toasting.
4. Press Loading handle down vertically until it is positioned in place. Once the bread has been toasted to the preset color, the Loading handle will be automatically sprung up, and you can remove the bread readily. The Loading handle can only be latched when the appliance connects to the power supply.
 5. During the toasting process, you may observe the toasting color. If the toasting requirements can be met by turning the knob to the left to CANCEL the position, you can end the toasting. The next time you use it, you need to adjust the toasting color range.

CAUTION

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, Turn the knob to the left to stop toasting.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

CLEANING AND MAINTENANCE

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure that the crumb tray is completely closed before using the toaster again.
4. When not in use or stored, the power cord may be wound under the bottom of toaster
5. Do not use abrasive detergents, any organic solvents or aggressive chemicals.

STORAGE

- Switch off and unplug the appliance; let it completely cool.
- Complete all requirements of section CLEANING AND MAINTENANCE.
- Cord can be stored in the cord holder clips provided at the bottom of the appliance.
- Keep the appliance in a dry cool place.

PRODUCT TECHNICAL SPECIFICATIONS DETAIL	
Model	iToast 4 Slice Pop-Up Toaster
Voltage / Frequency	230V AC / 50 Hz
Power	1400 W
Capacity	4 Slice

TROUBLESHOOTING

If your toaster malfunctions or fails to operate, check if the appliance is plugged in properly or check the wall socket. Try unplugging the appliance and then plugging it back. Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your toaster should require repairs, do not try to fix it yourself. Please contact your nearest authorized service center or call at **USHA care** our toll-free number 1800-1033- 111.

WARRANTY CARD

This appliance has a warranty for 2 years on product against all manufacturing defects from the date of sale. In the event of any complaint, please contact USHA Care at toll-free no. 1800 1033 111.

The warranty is valid only when:

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer. Liability for consequential loss or damage is neither accepted nor implied.

S. No: _____ DATE: _____

CASH MEMO: _____

OWNER'S NAME & ADDRESS: _____

DEALER'S NAME AND ADDRESS: _____

Dealer Stamp

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.