

USHA®

To explore
our range of products
and recipes log on to
www.ushacook.com

USHA
COOK

JUICER MIXER GRINDER NUTRIMATIC



USHA care | Toll Free: 1800 1033 111

usha_care@usha.com

USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurugram - 122 001 (Haryana)

Tel : +91-124-4583100, Fax : +91-124-4583200, E-mail : usha_care@usha.com, Website : www.usha.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi -110 001(India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001 : 2015 Certified Company

USHA® © Registered Trademark and Copyright of USHA INTERNATIONAL LTD.  © Registered Trademark of USHA INTERNATIONAL LTD.

Instruction Manual



Dear Customer,

Congratulations!

You are now a Proud Owner of an USHA Juicer Mixer Grinder Nutrimatic

Innovatively designed, using only the highest quality material and components for years of trouble free performance.

Please read these instructions carefully before using.

Best Wishes

CONTENTS

Safety instructions	2
Know your product	4
Operating instructions	5
Recommended usage capacity - jars	7
Cleaning and maintenance	8
Product technical specifications detail	9
Troubleshooting	10
Warranty card	11



FREE
HOME
SERVICE*

SAFETY INSTRUCTIONS

Before using the Usha electrical appliance, please read all the instructions carefully and follow basic precautions mentioned below. This product is designed and intended for household use only. Even if you are familiar with the product then also place it handy for ready references.

1. After unpacking the unit and before any use, make sure the mechanical parts of the unit and all its attachments are not damaged.
2. Before connecting the appliance make sure that the mains voltage complies with the voltage specified.
3. Place your Juicer Mixer Grinder ("JMG") at a convenient height so that you can operate it easily. You should be able to look down into the attachments to check the circulation of ingredients.
4. Clear out some space around the machine and keep JMG away from direct heat and sun
5. Before operating the juicer, ensure that the mesh assembly is properly seated.
6. In dry grinding, friction may heat up the jar. It has nothing to do with the motor, so do not worry.
7. Remember, JMG operates at optimum efficiency at the specified voltage only, wide voltage fluctuations during operation may affect quality of grinding even though the motor may still be safe. If your area faces such periodic fluctuations and if you cannot get a voltage stabilizer, operate the machine only as per specified voltage (230 V AC).
8. Ensure that cover / cap locks are securely clamped and hold down lightly while JMG is in operation.
9. Do not open the lid or dome when the Mixer Grinder is running. Do not add solid ingredients when Mixer Grinder is running.
10. Do not grind hot ingredients in your Mixer Grinder.
11. Do not overload the grinder.
12. Handle the blades carefully. Wash them under running water and do not rub by hand.
13. In dry grinding, the jar may get heated up due to friction- this is nothing to do with motor. The jar will cool down with time. If motor is getting hot you can feel hot air coming out of the side vent or bottom. Switch OFF motor and restart after 10 minutes.
14. Do not use Mixer Grinder on wet surface.
15. Do not run Mixer Grinder for more than 5 minutes continuously. Give a gap of 2 minutes if you need to use for more time.
16. Keep Mixer Grinder away from hot gas burner electric hot plate or similar appliances.
17. It is normal for the Mixer Grinder to get a little discolored especially when used with item like turmeric, to avoid this make sure that item like turmeric do not come in contact with the Mixer Grinder body.
18. This appliance is strictly for household use.
19. Do not drop the main unit or Jars.
20. Never use accessories or parts which are not recommended or made by other manufacturers
21. Do not use the jars as storage containers.
22. Do not run the product unless jar is in position. Lids too should be firmly placed.
23. Do not allow children to handle JMG.
24. Do not use any metal objects, like knife etc. to clean the filter mesh, as it may get damaged.
25. Never lay any thin plastic sheet or cloth under the basic unit. It may get sucked up and block ventilation holes in the base.
26. Do not run JMG without any ingredients.
27. Do not attempt to repair JMG at home or allow any unauthorised person to do it either. In the event your JMG needs attention, contact at **USHA CARE** Toll free number 1800 1033 111.

KNOW YOUR PRODUCT

DESCRIPTION OF PARTS

JUICER UNIT

1. Feeder Opening
2. Pusher
3. Juicer Mesh
4. Spout
5. Top Cover
6. Juicer Housing

BASIC UNIT

7. Rotary Switch
8. Pulp Container

LID LOCK

9. Lid Lock
10. Overload Protection Switch

SPATULA

11. Spatula
12. Blender Jar Cover

BLENDER JAR

13. Blender Jar
14. Blending Blade
15. Jar Collar

MULTIPURPOSE JAR

16. Multipurpose Jar Cover
17. Multipurpose Jar with Blade Assembly
18. Jar Collar

DRY GRINDER JAR

19. Chutney Jar Cover
20. Chutney Jar with Blade Assembly
21. Jar Collar



KEY FEATURES

1. Power – 500 W
2. 100% copper motor.
3. Detachable pulp container for convenience.
4. 2 SS jars with flow breaker for fine grinding.
5. Break resistant transparent PC blender jar.
6. Stainless steel- hygienic juice mesh.
7. 3 Step rotary speed control with pulse function.
8. Overload protection for motor safety.
9. Antiskid rubber feet for stable operation.

OPERATING INSTRUCTIONS

UNPACKING YOUR JUICER MIXER GRINDER

Carefully unpack your Juicer Mixer Grinder, as blades are very sharp.

Assembly







WARNING:

Make sure that the juicer mixer grinder is switched off and unplugged.

1. Clean the juicer mixer grinder attachments before using it for the first time with damp cloth.
2. Insert the juicer mixer grinder blades into the appropriate jar and turn until it locks into position.


How to use the juicer

- Place Juicer housing on the base unit & rotate juicer housing to lock. Put Spout cover in position and place glass or bowl under spout. (fig. 1).
- Place filter mesh into the housing and push down slightly so that the mesh fits and locks properly on the lower coupler of the motor housing. Rotate the mesh a little to see that it fits properly. (Fig. 2).
- Place top cover onto Juicer housing and lock side clamps (Fig. 3).
- Wash and cut ingredients to fit in feeder opening.
- Plug in and Switch on the machine at first Speed (Position-1). Push ingredients into the feeder with the help of the pusher (Fig. 4).
- At the end of the operation, switch off the Juicer-Mixer-Grinder and unplug.

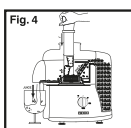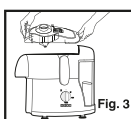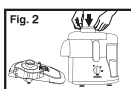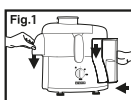

⚠ Caution:

- Do not use fruits such as bananas & peaches which produce a thick paste that can clog the filter mesh.
- Remove pulp from the pulp container whenever it is full. Stop machine before removing pulp container. (Fig. 5).
- Always cut the Fruit into small pieces so as to pass through the feeder opening.

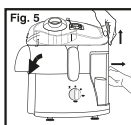

How to use the mixer / grinder


- Place ingredients in blending / multipurpose / chutney jar and put lid in position.

Place jar on basic unit and turn the jar.

- Switch off after blending / grinding. Unplug. Unlock and lift the jar from the basic unit.

Pour out the contents.

The juicer mixer grinder is fitted with a heavy duty universal motor using a winding wire that can withstand extremes of temperatures. Therefore, the chances of motor failure are extremely rare. It is however possible that the mixer motor may get overloaded when you attempt to grind quantities in excess of normal. The motor of the Juicer- Mixer- Grinder is protected by a resetting type Overload Protection Switch. In case of overloading, the Overload Protection Switch disconnects the power supply to the motor. In such an eventuality, switch off the supply. Remove the excess load or add water to the ingredients, if the recipe so permits. Wait for a few minutes. Reset the Overload Protection Switch located below the base plate and restart the mixer. (Fig. 9).

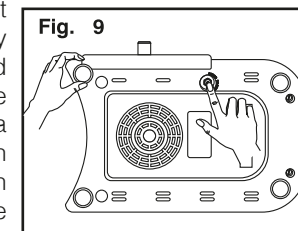

RECOMMENDED USAGE CAPACITY - JARS

Jar Type	Actual Capacity	Recommended Jar Capacity		
		Dry Grinding	Wet Grinding	Blending
Wet Jar	1.5 L	Na	Na	2 Banana (Approximately 200 g) / Mango with 500 mL Milk / Water
Multipurpose Jar	1.0 L	200 g Turmeric/ Spices Grinding	150 g of Urad Dal + 350 mL water	0.4 L
Chutney/Small Jar	500 ml	50 g Turmeric/ Spices Grinding	100 g of Coconut/Onion	NA

CLEANING AND MAINTENANCE

Make sure the Juicer Mixer Grinder is at "OFF" position and the plug is disconnected from outlet before putting on or taking off any part during cleaning/maintenance. The appliance shall be stored in a proper manner at a dry place.

Cleaning of juicer body parts & mesh

1. After Use pull out the pulp container & Empty it in to waste basket.
2. Unlock the locks of the Juicer Cover and remove the Juicer cover.
3. Pull out the mesh from the Juicer body and wash it under running water & use the brush to clean the cutter and mesh.

NOTE:

DO NOT USE HANDS TO CLEAN THE MESH AS IT CAN INJURE.

4. Clean all the plastic parts like Top Cover, Juicer housing, Spout, Pulp Container with mild detergent and running water after each use

Cleaning of Jars:

5. After use unlock the Jar, pour out the contents into a clean utensil.
6. Half fill the Jar with little warm water and a teaspoon of liquid soap, close the lid and run it on the main unit at 1st position for about 30 seconds. This dislodges the food particles lodged inside the jar. Pour out the soap solution, wash the jar under running tap water.
7. Use a soft brush to clean the rubber gasket and blade assembly.
8. Wipe and dry with a clean cloth.

Cleaning the main unit:

9. Never immerse motor unit in water for cleaning. Wipe and clean the outer surface with a dry or slightly damp cloth.
10. Do not use abrasive cleaners or scouring pads on appliance as this may damage the appliance and will impact its appearance.
11. Dry all parts.
12. Reassemble all parts in proper order and store the appliance in a dry place.

PRODUCT TECHNICAL SPECIFICATIONS DETAIL

Model No.	Nutrimatic
Rating	230V- AC / 50 Hz
Motor	Universal
Power consumption	500 W
Rating	30 Minutes (5 minutes ON, 2 minutes OFF)
Speed control	Rotary type, 3 speed with pulse

*Due to continuous efforts for product upgradation, specifications are subject to change without prior notice.

TROUBLESHOOTING

If your juicer mixer grinder malfunctions or fails to operate, check if the juicer mixer grinder is plugged in properly. Try unplugging the juicer mixer grinder and then plug it back. Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your juicer mixer grinder should require repairs, do not try to fix it yourself. Please contact your nearest company service please contact **USHA care** at Toll free number 1800 1033 111.

Trouble	REASON	CHECK POINTS
Juicer mixer does not run	No power supply	Check main supply
	Overloading of Material	Remove some material and add in small quantities
	Overload trip	Press the Overload trip button at the bottom of Mixie
	Other than above mentioned	Call USHA care at Toll Free No. 18001033111
Motor cooling is not sufficient	Motor housing airvents blocked	Use a dry brush to clean air vents
Increase in Mixing/ blending time	Overloading of Material	Remove some material and add in small quantities
Unit overheating	External heat source	Check and remove if any heat source nearby
	Uneven platform that block airvents	Place the blender on level surface
	Overloading of material	Remove some material and add in small quantities
Damaged Cord	Physical damage	It is advised that the cord be replaced by an USHA authorised service technician

WARRANTY CARD

This appliance has a warranty for 2 years on product and 5 years on motor against all manufacturing defects from the date of sale. In the event of any complaint, please contact USHA Care at toll-free no. 1800 1033 111.

The warranty is valid only when:

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the Authorized Dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer. Liability for consequential loss or damage is neither accepted nor implied.

S. No: _____ DATE:, _____

CASH MEMO: _____

OWNER'S NAME & ADDRESS: _____

DEALER'S NAME AND ADDRESS: _____

Dealer Stamp

