

To explore
our range of products
and recipes log on to
www.ushacook.com

USHA
COOK

USHA care | Toll Free: 1800 1033 111

usha_care@usha.com

USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurugram - 122 001 (Haryana)

Tel : +91-124-4583100, Fax : +91-124-4583200, E-mail : usha_care@usha.com, Website : www.usha.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi -110 001 (India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001 : 2015 Certified Company

USHA

® Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



® Registered Trademark of USHA INTERNATIONAL LTD.

USHA®

RICE COOKER

RC 18GS2



RC 18SS1



Instruction Manual



Dear Customer,

Congratulations!

You are now a Proud Owner of an USHA Rice Cooker

Innovatively designed, using only the highest quality material and components for years of trouble free performance.

Please read these instructions carefully before using.

Best Wishes

CONTENTS

Safety instructions	2
Know your product	3
Operating instructions	4
Product technical specifications detail	6
Cleaning and maintenance	6
Troubleshooting	7
Warranty card	8



AUTO KEEP WARM

1.8 L
COOKING
CAPACITY



STEAMER FOR
PERFECT STEAMING

FREE
HOME
SERVICE*

SAFETY INSTRUCTIONS

We recommend that you read the following instructions carefully, before using the appliance.

1. Check if the voltage indicated on the base of the appliance, corresponds to the local electrical mains voltage before you connect the appliance.
2. Before using the cooker for the first time, remove the scoop, measuring cup and packing material.
3. Wipe the bottom and sides of pan before placing it on the heater.
4. Take extra care while handling the cooker when the cooking pan has hot liquids in it.
5. Prevent insects from entering the electrical portion of the cooker by keeping it clean.
6. Make sure that the pan is placed properly in the cooker. If the pan is not positioned correctly, the switch may click off too soon or heater may be damaged. (Your rice cooker has been designed with a thermal fuse which may shut the heater off in these cases.)

Note: Cooking will not start until pan is placed properly in the cooker.

7. Be sure the switch is off before removing the pan.
8. Do not allow water to reach thermostat or heating plate.
9. Do not immerse the body of the rice cooker in water or any other liquid.
10. Do not use the cooker if the cooking pan is dented or damaged.
11. Do not attempt to repair the rice cooker yourself. Please contact USHA Care at Toll Free No. 1800 1033 111.
12. Do not cook more than the maximum capacity in the cooking pan; It could cause spill over during boiling.
13. Do not tilt the rice-cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage.

KNOW YOUR PRODUCT

DESCRIPTION

- | | |
|------------------------|-------------------|
| 1. Lid | 7. Cook Switch |
| 2. Vent Hole | 8. Steamer |
| 3. Bowl (Inner pot) | 9. Trivet |
| 4. Control Panel | 10. Ladle / Scoop |
| 5. Cook Indicator | 11. Measuring Cup |
| 6. Keep Warm Indicator | |



OPERATING INSTRUCTIONS

1. Measure the rice using the measuring cup.
2. Wash the rice in another bowl until the water becomes relatively clear.
3. Place the cooking plate inside the bowl. Put washed rice into the bowl. Add water as per general guidelines for rice preparation. You may add or reduce the amount of water depending on your personal taste.
4. Set the bowl inside the rice cooker.

Note: No foreign matter can be allowed between inner pot and electric heating plate.

5. Close the lid in place.
6. Plug in and switch On.
7. Press the switch. The cooking indicator lights up, indicating cooking has started.
8. When rice cooking is done, the switch will pop up & cooking indicator will switch off while the keep warm indicator will start to glow indicating that the keep warm function is working.
9. After the switch pops up, leave the lid covered for at least 15 minutes to steam the rice.
10. Unplug after use by grasping the plug and not by holding the cord.
11. Please do not use metal spoon as it may damage the appliance. Note: When filling the bowl with rice, the attached spoon should be used to avoid scuffing the coating of inner pot and causing exfoliation of coating at the same time.

GENERAL GUIDELINES FOR RICE PREPARATION

One cup of uncooked rice makes approximately 3 cups of cooked rice.

Rice should be level with the brim of the measuring cup.

KEEP WARM FUNCTION:

- After cooking is completed "keep Warm" Function automatically starts until the cord is unplugged.
- Always unplug power cord before taking the pan out of the cooker.
- Do not switch to cooking again during "keep warm" function.
- Do not Keep rice in Keep Warm model for more than 4 hours
- Do not use keep warm function to reheat cold rice.

HOW TO USE THE STEAMER

1. Add water as desired into the bowl (inner pot) and place the bowl inside the rice cooker.
2. Place the steamer on top of the bowl. Place the food you wish to steam inside the steamer. (Place the food in a dish if required.)
3. Cover the rice cooker with the lid.
4. Plug in the power cord and press the switch. The cooking indicator lights up, indicating cooking has started.
5. Time the cooking manually.
 - a. The rice cooker will automatically switch to keep WARM mode when the water evaporates.
 - b. Please note that the food will continue to cook in Keep Warm mode.

NOTE: ALWAYS ENSURE THERE IS WATER IN THE PAN DURING STEAMING

6. Turn OFF the rice cooker when the steaming is finished.
7. Remove the food, then the steamer and finally take out the bowl and pour out the water.

Tips:

- Grease the inner surface of bowl with ghee or oil to prevent food from crusting or sticking to the bottom of the bowl/pan.
- For foods that tend to crust easily (like rava, khichdi etc.) grease the inner surface with ghee or oil before putting the ingredients in it.
- The taste of the rice will depend on the quality of rice and soaking time before cooking.

PRODUCT TECHNICAL SPECIFICATIONS DETAIL

Model No.	RC18SS1	RC18GS2
Power	700 W	700 W
Voltage	230 V AC	230 V AC
Frequency	50 Hz	50 Hz
Capacity (Cooking bowl)	1.8 L	1.8 L
Keep Warm Mode	Included	Included
Steamer	Not Included	Included
Ladle/Scoop	Included	Included
Measuring Cup	Included	Included
Trivet Plate	Included	Included
Lid Type	Steel	Glass
No. of Bowl	One	Two

Note: In view of USHA Policy of continual development, specifications may change notice.

CLEANING AND MAINTENANCE

- Wash the Bowl, Steamer, Trivet plate, Ladle & Cup in the warm soapy water or use mild liquid detergent.
- Do not use metallic sharp spoon or abrasive substance as it will damage the coating of the bowl.
- COOKER - Wipe with a clean damp cloth. Donot immerse the cooker in water. Do not allow water to enter thermostat.

TROUBLESHOOTING

Sr. No.	Observation	Cause	Solution
1	In ON condition, the cooking light is OFF and	Heating plate is not hot	The rice cooker is not connected to power supply.
		Heating plate is hot	1.Wiring connection of indicator light may have loosended.
2	The cooking light is ON and	Heating plate is not hot	Wiring connection of Heat Plate may have loosend
3	Cooked rice is crude or time of cooking is too long	1. Cooking time is insufficient.	1. Cooking rice according to required conditions.
		2. Heating Plate is deformed.	2. In case of deformation please contact USHA care at Toll Free No. 1800 1033 111
		3. Inner pot is not in contact with the heating plate.	3. Turn the inner pot slightly so that is in contact with the heating plate.
		4. There is foreign matter between inner pot and heating plate.	4. Remove the foreign matter.
		5. Inner pot is deformed.	5. Please contact USHA care at Toll Free No. 1800 1033 111.

WARRANTY CARD

This appliance has a warranty for 2 years on product and 5 years on heating element against all manufacturing defects from the date of sale. In the event of any complaint, please contact USHA Care at toll-free no. 1800 1033 111.

The warranty is valid only when:

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the Authorized Dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer. Liability for consequential loss or damage is neither accepted nor implied.

S. No: _____ DATE: _____

CASH MEMO: _____

OWNER'S NAME & ADDRESS: _____

DEALER'S NAME AND ADDRESS: _____

Dealer Stamp